


880, 890 & 900 HEAVY DUTY SENSOR WASH ASSEMBLY

IT IS IMPORTANT THIS SIDE OF THE SOLENOID VALVE IS NOT OBSTRUCTED EITHER BY THE RED SHIPMENT CAP OR ANY OTHER OBJECT. PLUGGING WILL PREVENT THE SOLENOID VALVE FROM BREAKING SUCTION AND WILL SYPHON ALL FLUID OUT.

RELAY TIMER USED IN THE 890 MODEL ONLY

REFER TO WIRING DIAGRAM ON THE LID OF THE SENSOR WASH ASSEMBLY ENCLOSURE

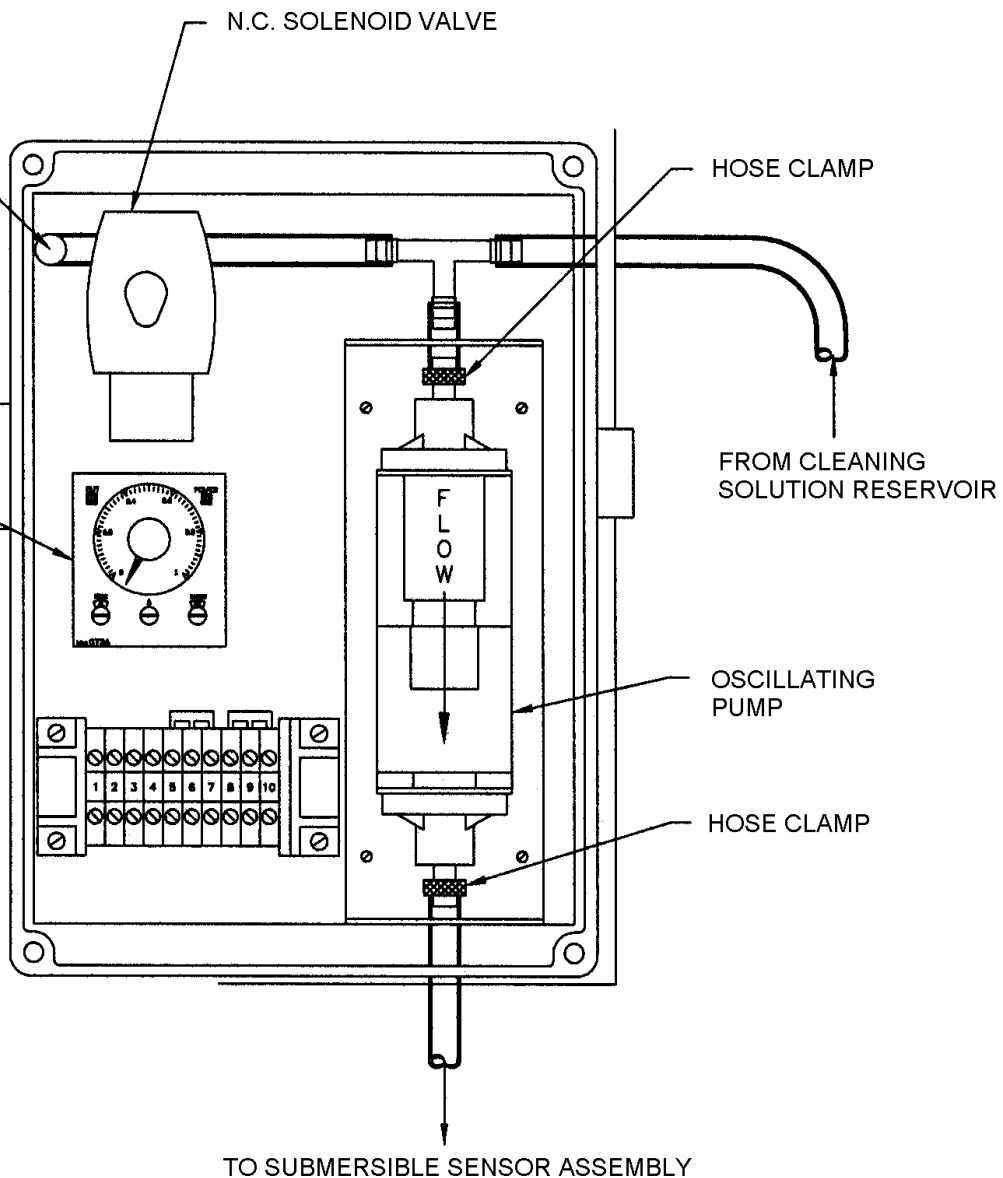


Sensor Wash for 890 Controller

IMPORTANT NOTICE

Make sure a hose clamp (provided) is used when installing the 3/8" O.D. vinyl tubing on the auto clean pump discharge port. This tube connects the pump discharge (bottom of pump) with the submersible sensor.

If the hose clamp is misplaced, use a small "tie wrap" for this purpose.

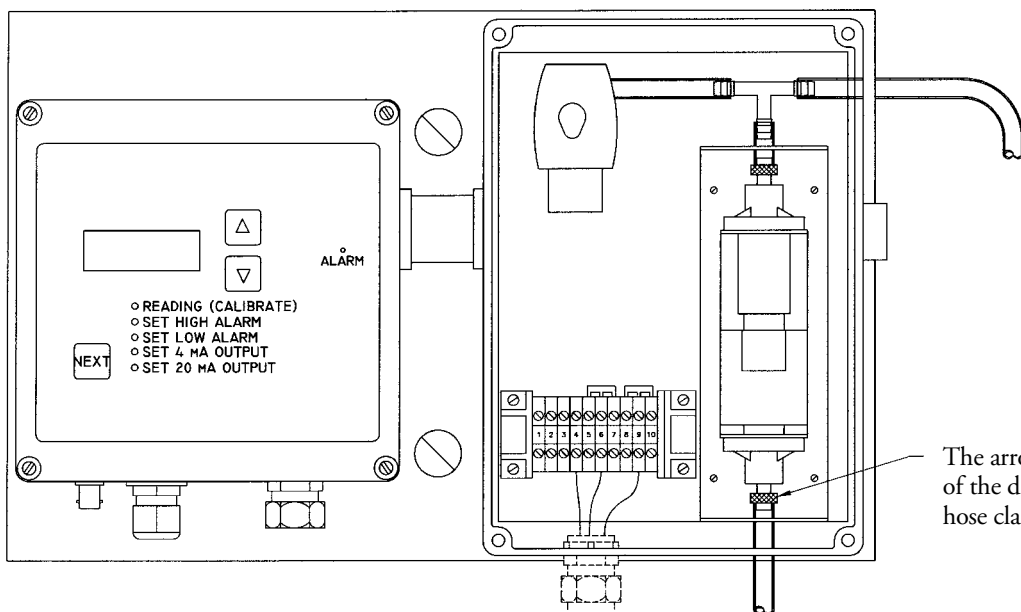

Hose Clamp

Sensor Wash for 880 and 900 Controller

**DO NOT OPERATE THE AUTO CLEAN SYSTEM
UNLESS THE DISCHARGE TUBE IS PROPERLY SECURED!**

USFilter

Stranco Products
P.O. Box 389
Bradley, IL 60915 U.S.A.
800.882.6466 phone
815.932.8154 phone
815.939.9845 fax

<http://www.stranco.com>
© 2001 USFilter